
How clean and dry is your gear?

1-888-EZEE-DRY 1-888-3933-379

ramairgeardryer.com

R-SBSTK - Rinse Station (with stickman) Instructions

1. Ensure stand is in the fully open position.

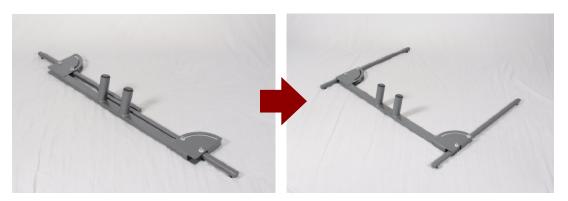

2. Place stickman caps in the top position.



toll free: 1-888-3933-379 fax: (204) 727-0561 info@ramairgeardryer.com

How clean and dry is your gear?


1-888-EZEE-DRY 1-888-3933-379

ramairgeardryer.com

R-SBSTK - Rinse Station (with stickman) Instructions


3. Stickman can be used in a standing or inverted position. Invert stickman for any garments with attached boots or gloves.



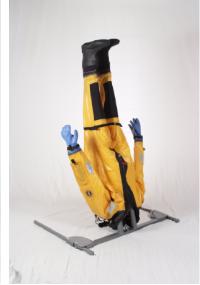

4. Articulate legs on stickman for desired length.



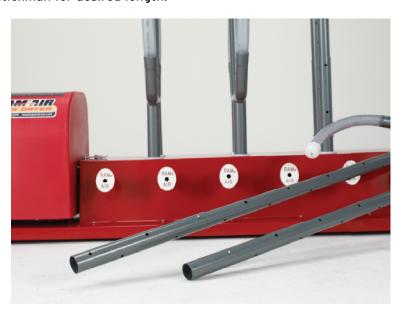


How clean and dry is your gear?

1-888-EZEE-DRY 1-888-3933-379

ramairgeardryer.com

R-SBSTK - Rinse Station (with stickman) Instructions

5. Place dressed stickman into stand.

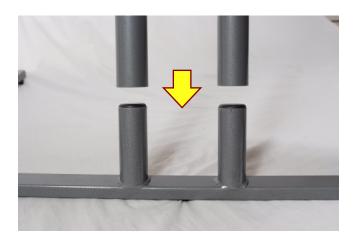



- 6. Rinse Garment. Follow the manufactures recommendations for cleaning and disinfecting. Inspect garment to ensure proper cleaning has been accomplished prior to drying.
- 7. Ensure no pockets of water remain trapped in garment. Shake garment to allow excess water to drain
- 8. Placed dressed and clean garment into dryer model 4-IHT. Follow dryer instructions.



9. Stand can be folded into the closed position for easy storage.

toll free: 1-888-3933-379 fax: (204) 727-0561 info@ramairgeardryer.com