



RAM AIR GEAR DRYERS ASSEMBLY INSTRUCTIONS

TG-4, TG-6, TG-8, 4-MU, 6-MU, 8-MU



TOOLS NEEDED FOR ASSEMBLY:



STEP ONE

Remove all bolts from deck leaving rubber gasket in place.



STEP TWO

Install left vertical air chamber with opening for the power pack facing away from center. Tighten bolts.



STEP THREE

Install right vertical air chamber, aligning straight edge with edge of base. Tighten bolts.



STEP FOUR

Install top air chamber.



STEP FIVE

Secure top air chamber to side air chambers with 1/4" bolts. Tighten with 7/16" wrench.




STEP SIX

Attach the stickmen to the top air chamber.



STEP SEVEN

Using a 9/16" wrench, secure each stickman with pre-lubricated 3" bolt. Don't over tighten. Stickmen should move freely.

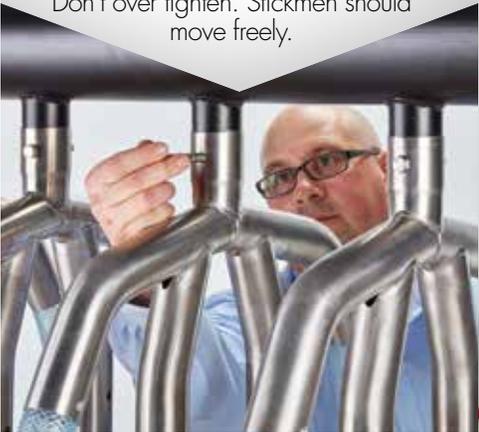

STEP EIGHT

Attach remaining stickmen and secure all bolts.



STEP NINE

Attach the power pack to the left air chamber.



STEP TEN

Secure the power pack with 5" bolt. Tighten with 1/2" wrench.



STEP ELEVEN

Thread all accessory valves onto right air chamber.



STEP TWELVE

Attach all helmet holders to the top air chamber by pushing in pin. Click to secure.

